


# DoctorMX5

## Keeping Your 5 Alive


Unit 12, Woodmans Farm  
Curdrige Lane  
Curdrige  
Southampton  
Hampshire, SO32 2BH  
Tel: 01489 896907  
W: [www.doctormx5.co](http://www.doctormx5.co)

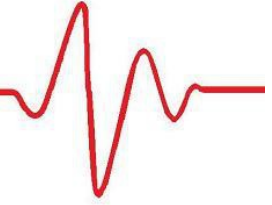

### Offset Number Plate Fitting Guide



The kit comes with four items:

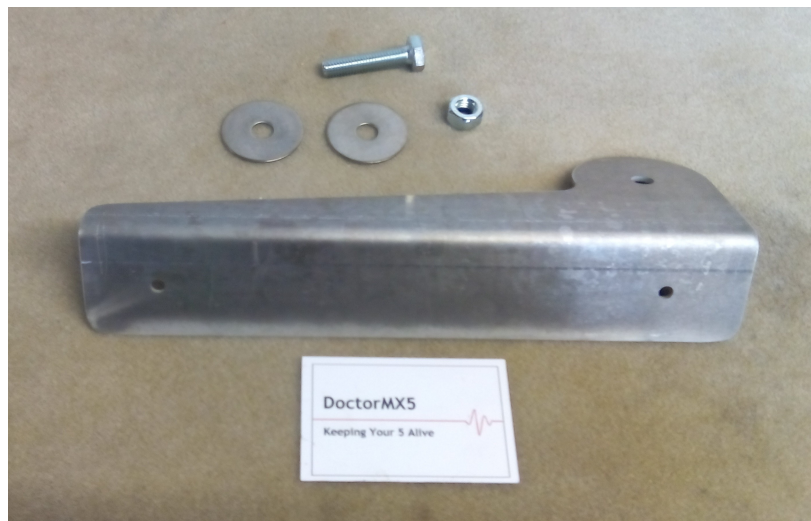

You'll need two 17mm spanners.

# DoctorMX5

## Keeping Your 5 Alive

Unit 12, Woodmans Farm  
Curdrige Lane  
Curdrige  
Southampton  
Hampshire, SO32 2BH  
Tel: 01489 896907  
W: [www.doctormx5.co](http://www.doctormx5.co)

Put the two washers either side of the left hand towing eye or tie-down. Pplace the main number plate holder on top of the upper washer. Push the bolt through the number plate holder, upper washer, towing eye and the lower washer. Thread the nylock nut on the end of the bolt and tighten as required.



Then all you will need is a square front number plate with holes drilled 21cm (210mm) apart to fit directly onto the number plate holder. You can move the holder to your preferred position once it is secured.