


DoctorMX5

Keeping Your 5 Alive

Unit 12, Woodmans Farm
Curdridge Lane
Curdridge
Southampton
Hampshire, SO32 2BH
Tel: 01489 896907
W: www.doctormx5.co

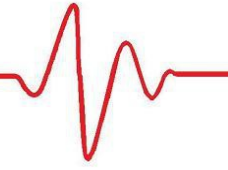

Offset Number Plate Fitting Guide



The kit comes with four items:



You'll need two 17mm spanners.

DoctorMX5

Keeping Your 5 Alive

Unit 12, Woodmans Farm
Curdridge Lane
Curdridge
Southampton
Hampshire, SO32 2BH
Tel: 01489 896907
W: www.doctormx5.co

Put the two washers either side of the left hand towing eye or tie-down. Pplace the main number plate holder on top of the upper washer. Push the bolt through the number plate holder, upper washer, towing eye and the lower washer. Thread the nylock nut on the end of the bolt and tighten as required.



Then all you will need is a square front number plate to fit directly onto the number plate holder.



NOTE: To position the number plate correctly we recommend that you **DO NOT** drill the holes until you have levelled the number plate on the bracket. We usually use number plate mounting tape to fix the plate as there are no holes..You can move the holder to your preferred position once it is secured.